


AGCO™ White Planters® Insecticide Drop Tube Instructions – Rear Mount

Part No. SB021552: bolt-on attachment for 9000 series

Drop tube SB021552 is used for all SmartBox® system rear mount applications on AGCO™ White® 9000 series planters.

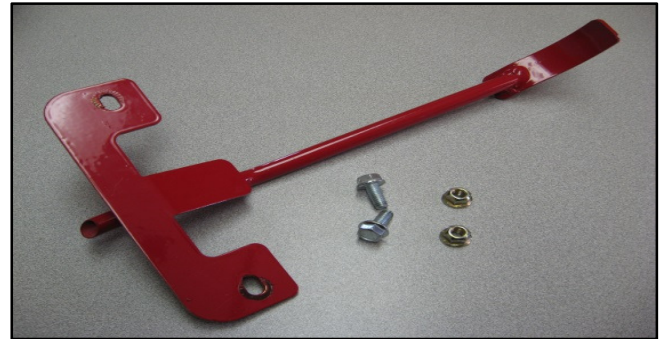

Installation Instructions:

1. Insert the tubes foot (*product discharge point*) down through the opening at the closing wheel's hinge point.
2. Align the holes in the drop tubes mounting bracket to the holes on the front side of the vertical rear mount bracket support brace and secure using the 5/16" bolts and nuts provided with the SB021532 or SB021535 bracket assemblies.



General Mounting Instructions: Your SmartBox® system requires that a minimum 45 degree angle be maintained at any point along the product discharge path from the meter outlet to the in-furrow drop tube. The drop tube may need to be bent to fit properly. The plastic hose should be cut to length to eliminate any unnecessary slack that could cause a flow restriction. Also, if using a seed firmer the drop tube's foot (if applicable) may need to be cut off or bent up if restricting the firmer's travel.

Replacement drop tubes can be purchased directly from:



Banders & Insecticide Systems

Larry M. Conrad
5833 Ondler Rd | Walker, IA 52352
Office: 319.224.3339 | Cell: 641.660.4533 | Fax: 801.365.8597
lconrad445@iowatelecom.net | www.atb-banders.com